


(i) indesit

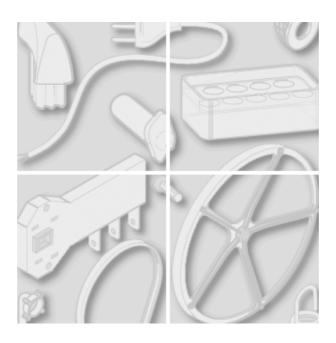

Model type: FM37K(IX)NZ

Commercial code: F025482









General notes

| Technical Documentation guidelines | |
|------------------------------------|--|
| | |

You can find herewith some generic information to simplify cunsulting of technical documentation:

- 1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.
- 2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.
- 3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no and linked to another spare parts list, In this case, serial no is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.
- 4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.
- 5. The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:

REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics


INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

- 6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates
- 7. Technical documentation cover shows model name and its commercial codes





4141010 Exploded views

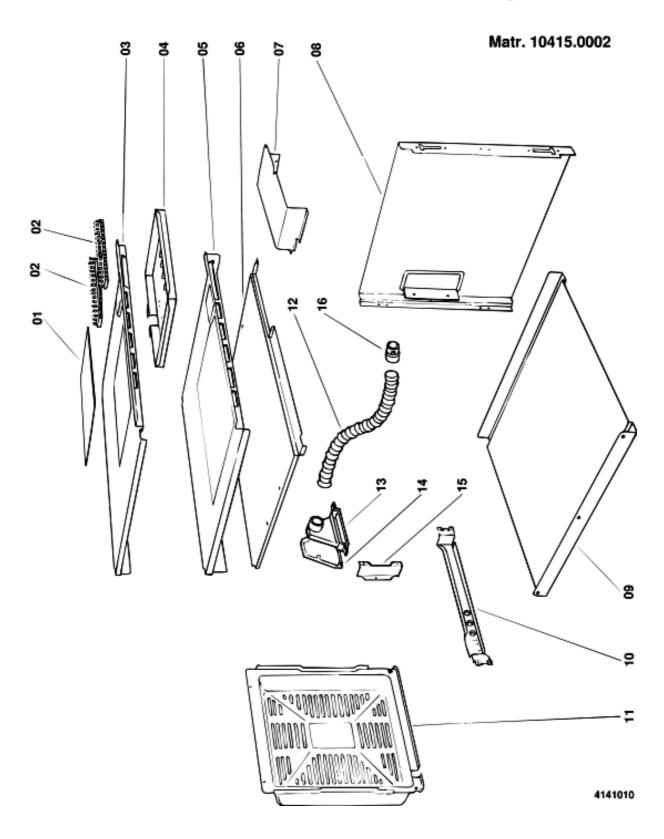






4141010 Spare parts list

| Ref. | Code | From | To S/N | Substitute | Description | Notice | Industrial |
|------|-------------|----------------------------------|------------------------------------|------------|-------------|--------|------------|
| 000 | C00083921 - | | user instruction book fm37k nz 7c. | | | | |
| 005 | C00028025 - | | oven top cover | | | | |
| 008 | C00022146 - | | access cover - side panel | | | | |
| 008 | C00048091 - | | oven side panel lh (fixed pivot) | | | | |
| 008 | C00048092 - | oven side panel rh (fixed pivot) | | | | | |
| 009 | C00022148 - | oven bottom cover | | | | | |
| 011 | C00048011 - | | outer back oven cover | | | | |





4141110 Exploded views

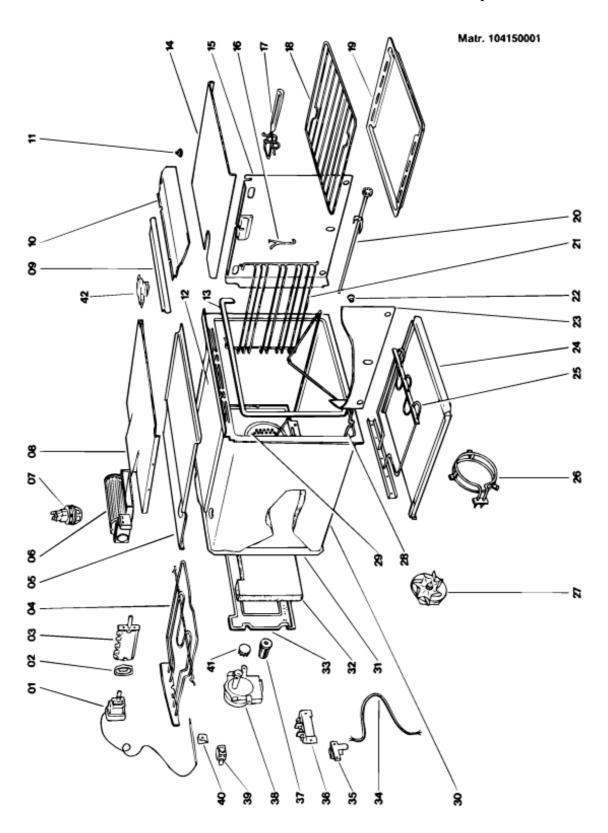






4141110 Spare parts list

| Ref. | Code | From | To S/N | Substitute | Description | Notice | Industrial |
|------|-------------|------|--------|---------------|-------------------------------------|--------|------------|
| 001 | C00011573 - | | | 1 x C00297891 | oven thermostat | | |
| 003 | C00025130 - | | | | oven function switch | | |
| 004 | C00039575 - | | | | upper heating element - oven/grill | | |
| 005 | C00034712 - | | | | ventilation ducting | | |
| 006 | C00033781 - | | | | motor fan/assy - | | |
| 007 | C00015910 - | | | | oven lamp e14 220v 15w | | |
| 007 | C00038035 - | | | | oven lamp assembly | | |
| 009 | C00033127 - | | | | top front trim (for grill) - black | | |
| 010 | C00030885 - | | | | heat deflector plate - knobs | | |
| 011 | C00011093 - | | | | deflector washer | | |
| 013 | C00027982 - | | | | oven door seal- 4 sides brown | | |
| 015 | C00017374 - | | | | self-cleaning oven panel - rh | | |
| 017 | C00016432 - | | | | handle - grill pan / turnspit | | |
| 018 | C00052667 - | | | | oven shelf-parallel australia | | |
| 019 | C00031422 - | | | | drip tray - black enamelled | | |
| 021 | C00033135 - | | | | wire runners - oven shelf supports | | |
| 022 | C00016118 - | | | | round securing nut - shelf runners | | |
| 023 | C00017375 - | | | | self cleaning oven panel - lh | | |
| 024 | C00016423 - | | | | ducting - lower heating element | | |
| 025 | C00023885 - | | | | lower heating element 240v | | |
| 026 | C00023884 - | | | | fan oven heating element circular | | |
| 027 | C00016057 - | | | | fan motor-(cooking) 220v/240v | | |
| 029 | C00034304 - | | | | oven back panel (inner)- self | | |
| 030 | C00033953 - | | | | oven insulation - sides | | |
| 031 | C00049098 - | | | | oven chamber -(fixed hinge pivot) | | |
| 032 | C00039048 - | | | | oven insulation mat - back | | |
| 033 | C00016108 - | | | | oven outer back panel | | |
| 034 | C00026767 - | | | | supply cable 10a 3x1 | | |
| 036 | C00039460 - | | | | terminal block 2.pole (fastex) | | |
| 040 | C00039578 - | | | | push in spring clip - thermostat | | |
| 042 | C00058008 - | | | | gas oven thermostat israele | | |
| 043 | C00075035 - | | | | klixon | | |
| 044 | C00038914 - | | | 1 x C00280851 | fixing plate for self-tapping screw | | |
| 099 | C00044805 - | | | | 2-pole earthing rivet | | |





4141210 Exploded views

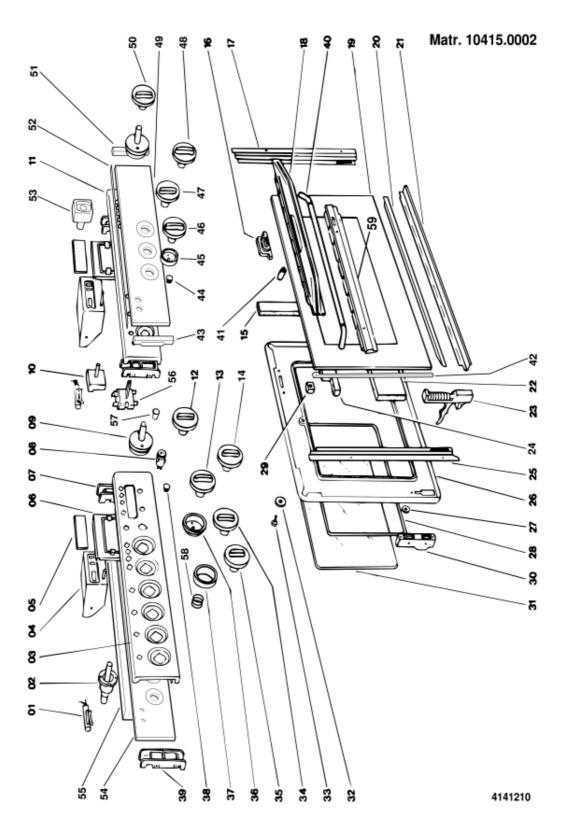





4141210 Spare parts list

| Ref. | Code | From | To S/N | Substitute | Description | Notice | Industrial |
|------|-------------|------|--------|--------------------------------------|------------------------------------|--------|------------|
| 001 | C00028054 - | | | pilot light - horizontal fitting red | | | |
| 003 | C00083000 - | | | dashboard fm37 ix nz/ir | | | |
| 004 | C00051477 - | | | electronic program eaton 220- | | | |
| 006 | C00028444 - | | | | support plate - programmer | | |
| 007 | C00048628 - | | | | control panel support rhs giugiaro | | |
| 013 | C00075060 - | | | | oven knob chrome 6mm | | |
| 016 | C00075033 - | | | | outlet vent rh ve.forz. | | |
| 017 | C00048707 - | | | 1 x C00049251 | rh front strut (fixed hinge) - | | |
| 019 | C00075063 - | | | | outer door glass | | |
| 021 | C00075062 - | | | | lower trim stainl.(fixed hinge | | |
| 023 | C00048108 - | | | | oven door hinge (fixed hinge | | |
| 025 | C00048708 - | | | 1 x C00049251 | lh front strut (fixed hinge) - | | |
| 026 | C00075055 - | | | | oven inner door & glass | | |
| 027 | C00033163 - | | | | washer - black | | |
| 030 | C00048090 - | | | | hinge support (fixed hinge pivot) | | |
| 038 | C00036428 - | | | | pilot light lens - yellow | | |
| 039 | C00048629 - | | | | control panel support lhs giugiaro | | |
| 040 | C00075061 - | | | | door handle - chrome | | |
| 057 | C00052593 - | | | | timer button (programmer) - black | | |
| 099 | C00017240 - | | | | self-tapping screw 8px9,52 t1/2t- | | |
| 099 | C00033431 - | | | | screw m5 x 20 tsp black | | |
| 099 | C00048667 - | | | | door handle spacer - black | | |





Notices

n1015029: Elimination of built-in oven spacer

With regard to all Indesit built-in ovens from serial number 20422.0001, knob spacer code 139381 has been removed in order to improve fixing. Because of this modification, new knobs designed to be fitted without spacer have been introduced. Premodification knobs will continue to be stocked by the spare parts warehouse and must be fitted only with the relative spacer. The following is a list of the various knobs identified by colour:

- -076286 (brown to be used with spacer) / 088883 new brown
- -075049 (black to be used with spacer) / 075064 new black
- -075043 (white to be used with spacer) / 075075 new white
- -075060 (stainless steel to be used with spacer) / 089440 new stainless steel






Electric schemes and links

Cod. se088200

SE088200

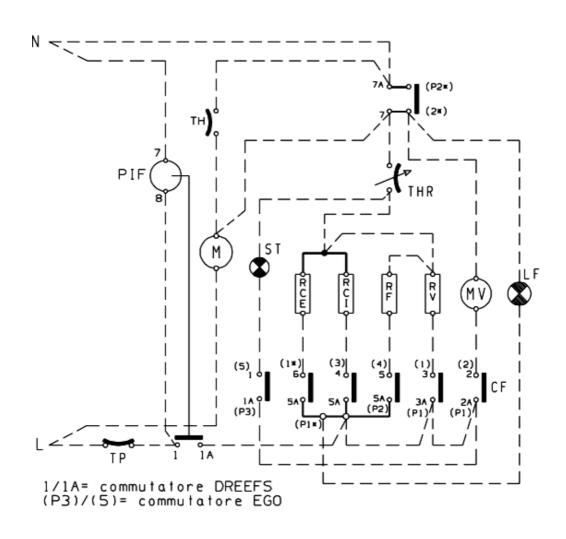

SCHEMA ELETTRICO FM 37 K NZ





Legend

Legend: se088200

| AE | Ignition transformer | PE | Plate electric (Normal and Rapid) |
|---------|--|--------|---|
| AT | Ignition transformer | PEL | Wall socket |
| CF | Oven commutator | PIF | Cooking programmer |
| CP | Plate commutator(Normal end Rapid) | POT | Thermostated potentiometer |
| CT | Plate commutator(Automatic) | PT | Termoprotector |
| DC DR | Double Knob double crown burner control card | PTC | Thermostated sensor |
| EV | Electro-Valve | RCE | Grill heating element ex- ternal |
| FC | End of cooking programmer | RCI | Grill heating element internal |
| FRONT | Daschboard | RE | Energy regulator |
| I/LF | OVEN LIGHT SWITCH | RF | Oven lower heating element |
| I/LF-MG | OVEN LIGHT SWITCH + ROTISSERIE | RG | Grill heating element |
| I/MG | TURNSPIT SWITCH | RG COM | Grill heating element un- ion |
| IL | Knobs' Lighting | RV | Heating element ventilated oven |
| ILG | Lamp switch turnspit | SA | Boiler operating led |
| IT | Thermostated switch | SB | Thermostated burner led |
| L | Line (Feed) | SF | Warning light working |
| LF | Oven light | SO | Probe temperature |
| LI | Oven light | SP | Operating Indicator Light for the Plate |
| M | Suction motor handle | ST | Warning light thermostat |
| MG | Turnspit motor | TH | Thermostat fixed |
| MO | Terminal board | TH2 | Thermostated burner cooling |
| MUFF | Oven | THR | Adjustable thermostat |
| MV | Fan motor | TP | Termoprotector |
| N | Neutral (Feed) | TRAV | Support terminal board |
| PA | Ignition push-button | TRM | Thermostated burner control card |